





661196 Sizzix® Bigz™ Die - Village Bungalow by Tim Holtz®



1. This die is designed to be used with the Village Dwelling die (660992) or Village Brownstone die (661205).

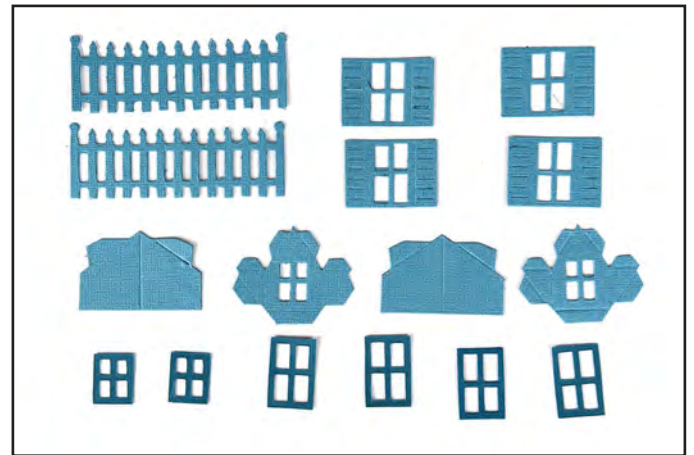

2. Die-cut from desired material.

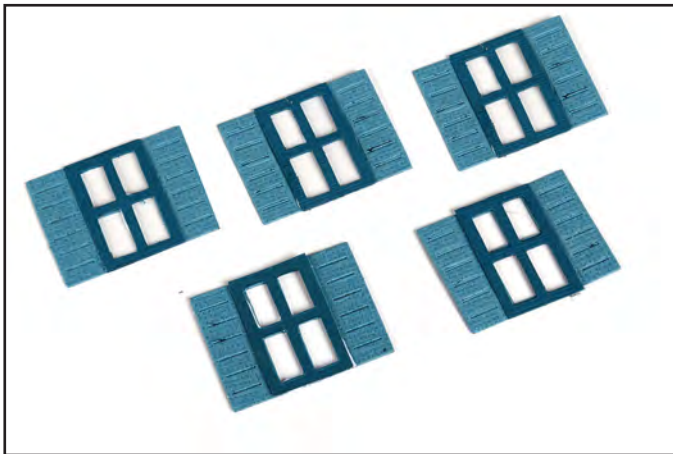

3. Build Shutters by adhering the window frames to the shutter body.



4. To build the Dormers, first adhere the window frame to the front of the dormer body. Fold the side flaps and tabs of the dormer body. Adhere roof to tabs on the top of the side flaps and at the top of the window. The back edge of the roof should align with the side of the dormer.



5. Adhere Dormers and Shutters to dwelling. Fences can be linked together to create desired lengths.

